


## How to install throttle cable on Jono & Johno 16hp vertical:

Undo cable clamp down bracket, feed the outer cable shield and inner throttle cable through, bolt it down so it's only tight enough to hold outer cable shield but be careful not to overtighten and crush the cable.

In this photo you can see the throttle in the "engine off" position. Make sure yours matches otherwise throttle might not be moving enough to shut engine off.

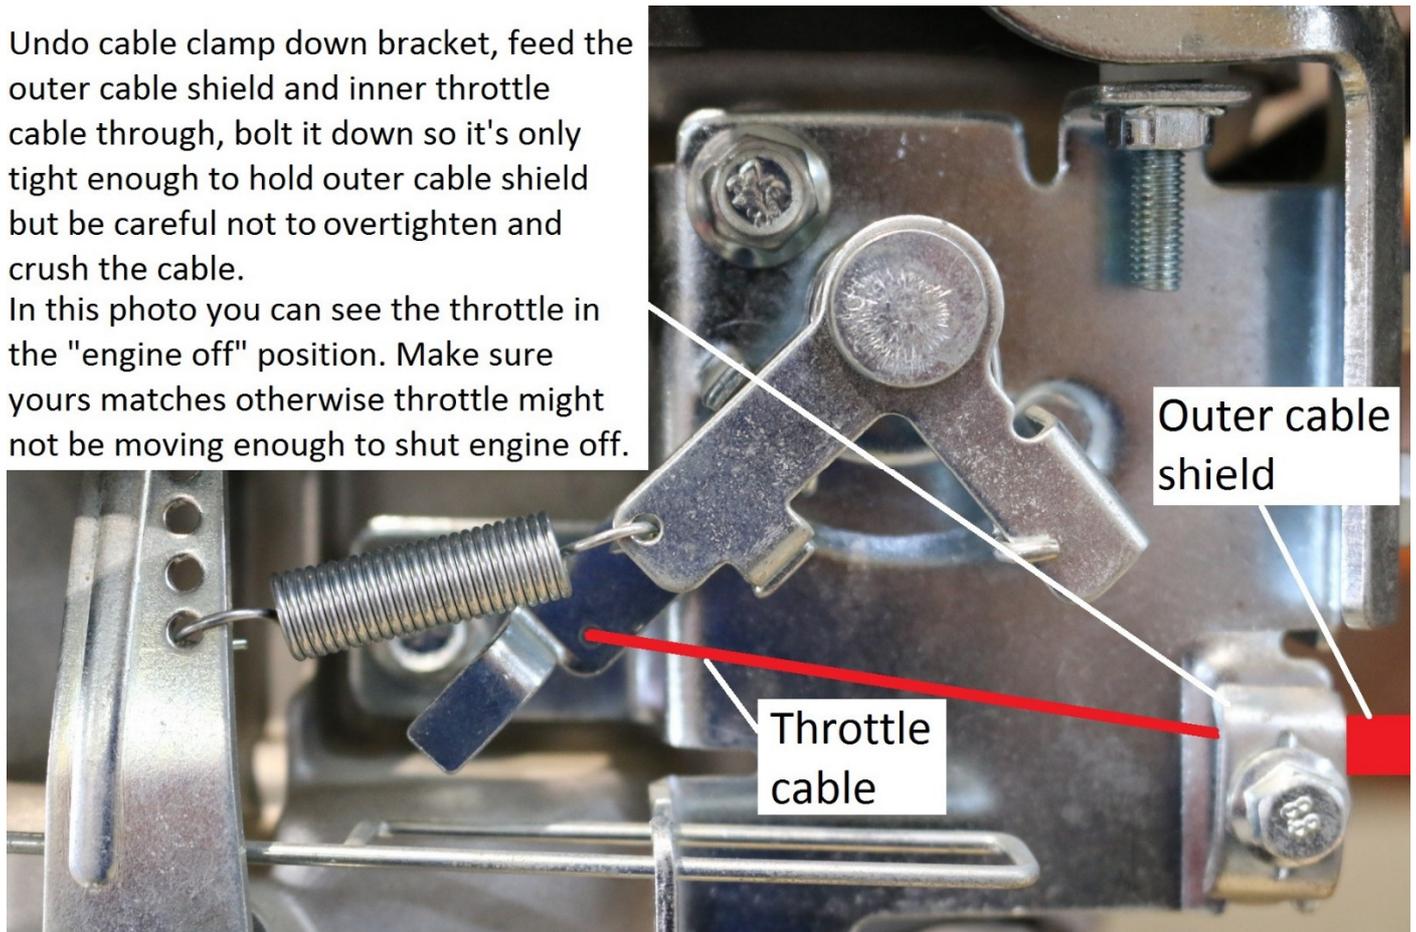

Make sure that when the throttle cable lever is in its "full choke" position that the choke rods circled in red here are being pushed in all the way (or as close to it as possible) to correctly activate the choke.

