


## How to install throttle cable on Jono & Johno 20hp vertical:

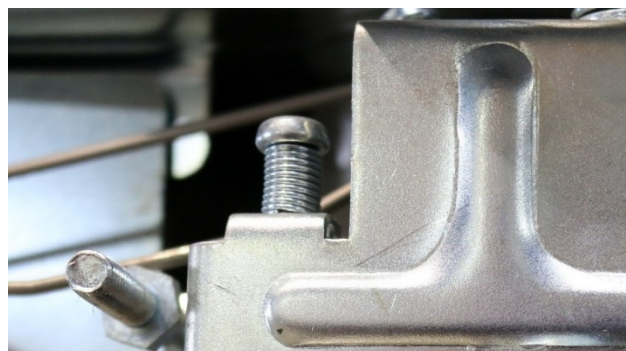

Undo cable clamp down bracket, feed the outer cable shield and inner throttle cable through, bolt down the cable clamp down bracket so it's only tight enough to hold outer cable shield in place but be careful not to overtighten and crush the cable. Repeat the process above for the choke cable.

